



## .... WatchDog LT™

Quick Reference Guide

For questions call

USAlert: 1 866-TWO TONE

### **PAGER CONTROLS & FUNCTIONS**

On / Off and Volume Control – Located on the top of the pager. Turn clockwise to turn on and increase volume, turn counter clockwise to lower and turn the pager off.

### **FOUR POSITION FUNCTION SWITCH**

The four position function is located on the top center of the pager. The four position function switch allows selection for frequency of operation (F1 or F2), type of alert, channel monitor, scan and the on / off duty. The functions are set during programming.

### **RESET SWITCH**

The reset switch is located on the top of the pager. The reset switch is used to return the pager to standby after an alert and can reset the menu selections. The reset button also provides a means to put the pager into the channel monitor mode or audio lock on mode. Depress and hold the reset for .75 seconds and the pager will beep once then enter monitor mode then release the reset button. Depress and hold the reset for 1.5 seconds and the pager will beep twice then enter the audio lock on mode then release the reset button. To delete stored voice messages, press the reset button and hold while you turn the unit off.

### **FRONT BUTTONS FOR MESSAGE CONTROL**

The right button initiates voice memory playback in WatchDog LT models. In playback mode you can use the left and center buttons to change direction of message playback selections. If enabled, the messages can be deleted by press and hold the right button.

### **CHANGING THE BATTERIES**

Lift the tab under the belt clip slightly towards the belt clip and slide the belt clip up

and remove the belt clip.  
Unscrew the captive screw and lift off the battery door.

Note: that the batteries all face in the same direction.  
Caution to not over tighten the screw.

### **CHARGER OPERATION**

The WatchDog charger will automatically recharge the pager and a spare set of batteries.

Recharge time depends on the charge condition of the batteries when recharging begins and if the pager is on or off. Under normal conditions the recharge period is typically less than **6** hours.

#### **WARNING:**

**DO NOT RECHARGE ALKALINE BATTERIES.  
DISCARD AND REPLACE DAMAGED BATTERIES  
USE ONLY HIGH QUALITY NIMH BATTERIES.**