
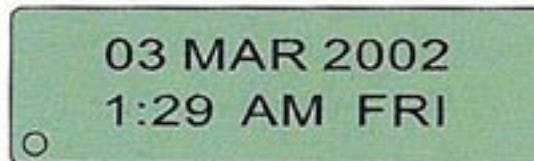








Getting Started

Power On - Insert the battery (AA) into the pager. If the battery is in, press and hold the  **READ Key** for 2 seconds. The pager will display the **STANDBY SCREEN**. After a short time, the display screen will go blank to preserve battery power. Press any key to return to the **STANDBY SCREEN**.


A rectangular display area showing the date and time. The text is white on a dark background. There is a small circle in the bottom left corner of the display area.


03 MAR 2002
1:29 AM FRI

Power Off - Go to the **STANDBY SCREEN**. Hold the  **ESCAPE Key** for 2 seconds to display the **SETTINGS Menu**. Using the  or  **Keys**, scroll to the  icon. Press the  **READ Key** twice to confirm your choice.






Backlight - Press and hold the  **READ Key** to activate or deactivate.

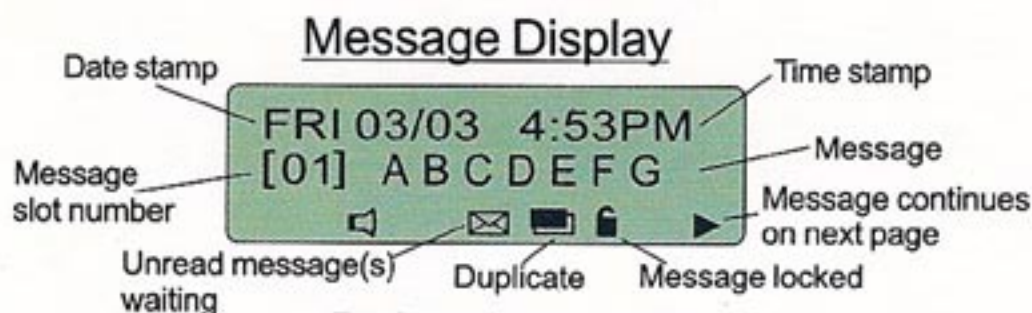Read Messages


The pager will display a new message when it is received. Each message is allocated a slot number (ie 01 , 02 , 03 etc). To read stored messages, press the  **READ Key** from the **STANDBY SCREEN**. Scroll through messages with the  or  **Keys** and press the  **READ Key** to confirm selection. You will be returned to the **STANDBY SCREEN** automatically if you scroll to the end of the message queue. If a message is longer than the screen width , use the  **READ Key** to view the rest of the message.



Delete messages

Whilst message is displayed - Hold the  **ESCAPE Key** for 2 seconds to view the **DELETE MENU Screen**. Using the  and  **Keys**, select between **LOCK**  (locks current message), **DEL**  (delete current message) or **D.ALL ALL** (delete all messages). Select  (lock current message) to prevent the current message from being deleted. Press the  **READ Key** to confirm selection. The  **ESCAPE Key** takes you back to the **STANDBY SCREEN**.

Settings Menu

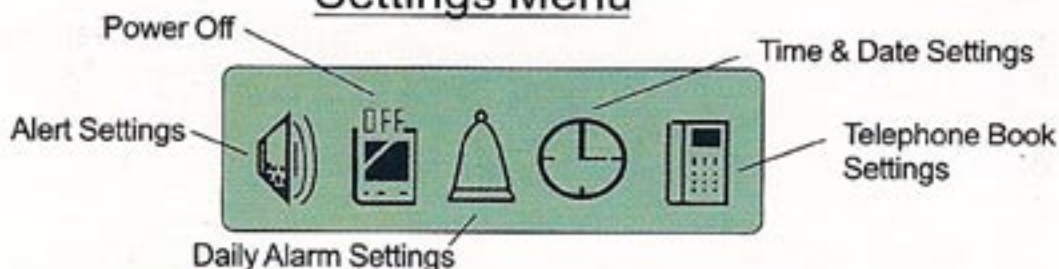

Hold the **ESCAPE Key** to select the **SETTINGS Menu**. Scroll through the menu using the or **Keys**. Press the **READ Key** to confirm your selection. Use the or **Keys** to modify options and the **READ Key** to proceed to the next option or to enter your changes. The **ESCAPE Key** takes you back to the **STANDBY SCREEN** without saving changes. *Note* : In the **TELEPHONE BOOK**, the **READ Key** must be pressed until it reaches the end of the *Name* field, before it will move along to the *Number* field.

ICONS

- | | |
|----------------|--------------------------------|
| Pager ON | Current Message is a Duplicate |
| Beeping Alert | Message Locked |
| Vibrate Alert | Out Of Range Indicator |
| Daily Alarm ON | Low Battery Indicator |
| Melody | Message continues on next page |
| Unread Message | |

FUNCTION KEYS

- | | |
|--------------------------|---------------------------------------|
| Move to previous message | Message READ Key |
| Move to next message | ESCAPE (back to previous menu) |